

KINGTOYS

MANUEL EN COURS DE TRADUCTION




RIDER CONCEPT

Importateur de loisirs innovants

VAROX 35W

Quad électrique KINGTOYS

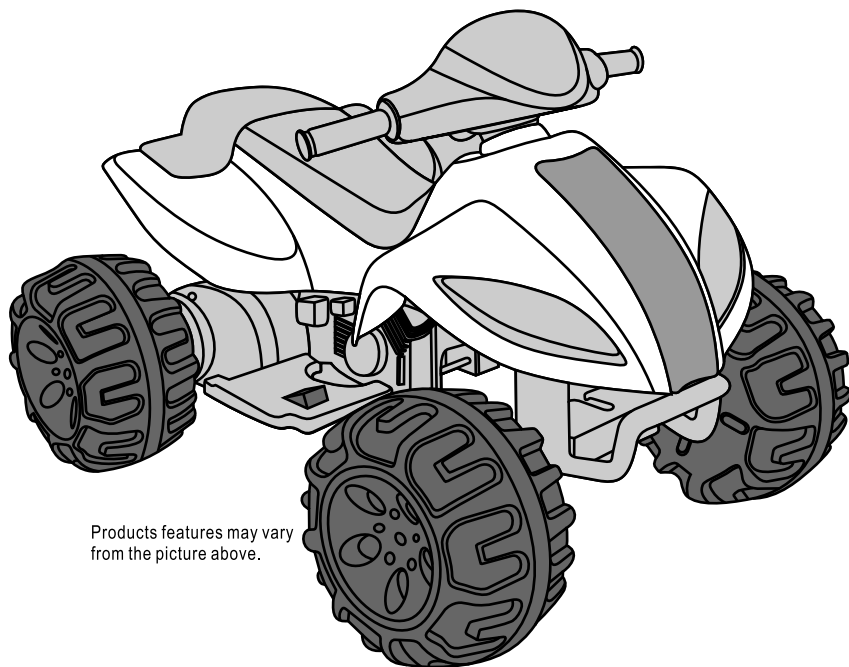

- Adapté aux enfants de 3 à 8 ans
- Capacité maximum : 30kg
- Le montage doit être effectué par un adulte

Conserver ce manuel.

Avant la première utilisation, charger la batterie durant 4-6 heures.

Table of contents

1. About Our Product	-----
2. The Specification	-----
3. Parts	-----
4. CautionsFor Safety	-----
5. Parts Diagram	-----
6.Assembly Steps	-----
7. How To Operation The Vehicle	-----
8. Fuse	-----
9. Charging The Vehicle	-----
10. Maintaining Your Vehicle	-----
11. Trouble Shooting Guide	-----
12. Disposal Of Battery	-----

1.About Our Product:

Thank you for your purchasing our products, we always keep pursuing being outstanding and designing comfortable and safe ride-on car for children .it will provide your children a wonderful childhood and your family lots of happiness.


Please read the manuals carefully before using this product. You can get correct operation method, simple and detailed installation procedure. Moreover, it can instruct you how to prevent improper way of operation, because any incident can result in serious injury.

Please read it carefully to make sure that all children obey all warning, cautions, instructs and safety topics and assure young riders are able to safely use this product.

2.The Specification

Age:	Dès 3 ans	Battery:	6V 7AH *1
Poids:	Max 30KGS	Size of car:	80*58*52CM
Speed:	3KM/H	Power way:	Charging type
Charge:	Input: depend on local voltage Output: DC 6V500mA	Average battery life:	Approximately 300 times
Charge time:	8-12 Hours	Fuse	10A


3.Parts list

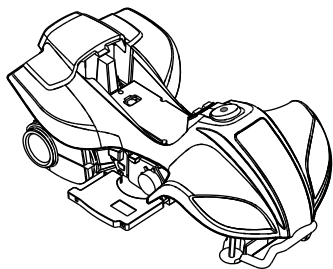

1.Vehicle Body X1



2.Handlbar X1

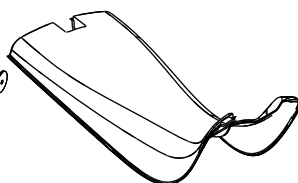


3. Seat X1




4. Driving Wheel X1




5. Wheel X3

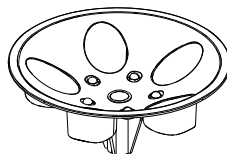


6. Hubcap X4

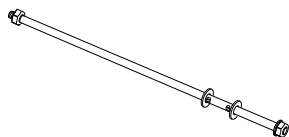


7. Rear Axle X1

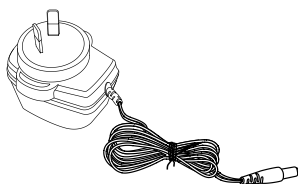

 8.Charger X1



 9. Spanner X1



10. Accessory Package X1


4.Cautions for safety

1. While riding, adult supervision is required at all times.
2. Always wear a helmet when riding.
3. Do not drive near roads or on the footpath.
5. It is not recommended to ride this vehicle on sandy or soft surfaces.
4. It is not recommended to drive the vehicle on wet surfaces or on slopes of greater than 15 degrees.
6. Do not use this vehicle outdoors when it is raining.
7. Make sure you come to a complete stop before changing directions from forward to back.
8. Don't allow children to operate the charger or play with the battery.
9. Clean the vehicle with a dry cloth only.
10. Please follow the correct weight and age limits allowed to drive this vehicle.
11. It is prohibited to change the circuit or add other electric parts.
12. Adults must teach their children about safe driving procedures.
13. Please cut off the power when stop diving.
14. Check the seat. Whether it has been fitted and secured with a bolt before driving.
15. Inspect wires and connections of the vehicle periodically.
16. Charging the battery should only be done by adults.
17. Charging plug is located underneath the seat.
Check all wire plugs and connections periodically.
18. In order to avoid accidents, please ensure the vehicle is safe before riding.
19. Do not let any child touch the wheels or be near them when the car is moving .

5. Assembly Steps


NOTE: some parts shown are assembled on both sides of vehicle.

①	Vehicle Body X1
②	Rear Axle X1
③	Driving Wheel X1
④	Hubcap X4
⑤	Ø10 Washers X7
⑥	Locknut X4
⑦	Wheel X3
⑧	Handbar X1
⑨	Seat X1

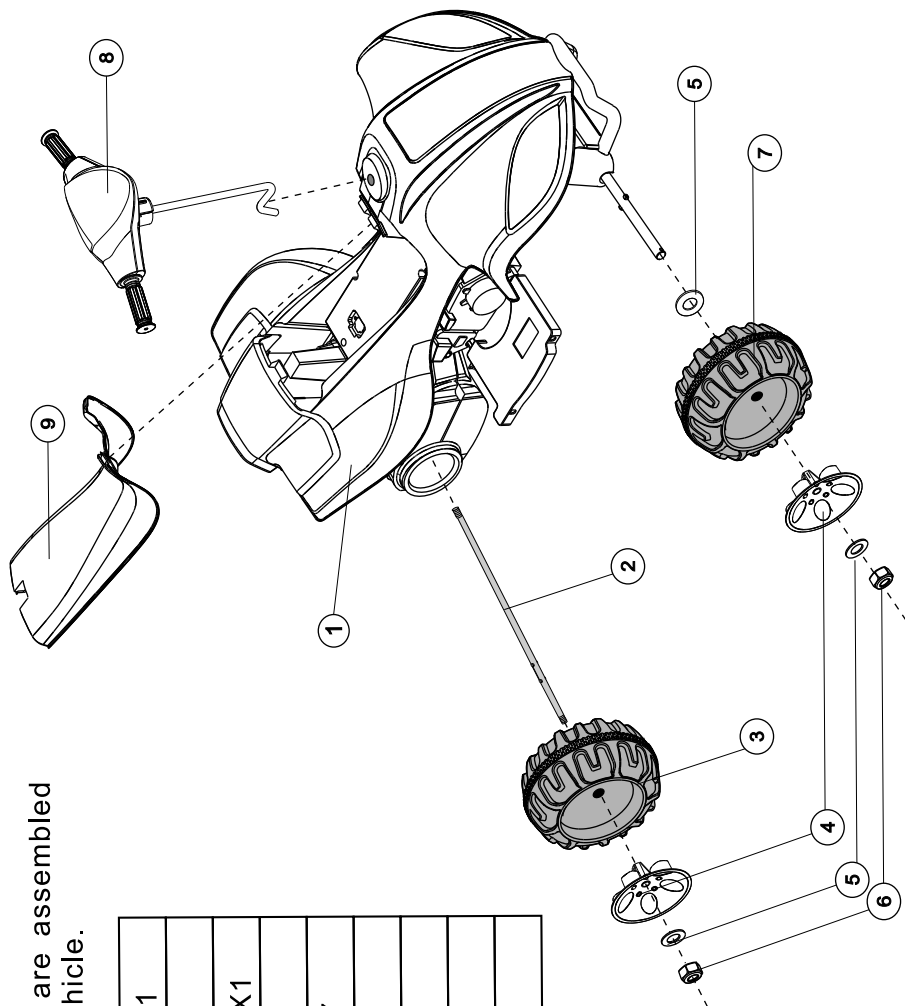


6. MONTAGE

- La durée du montage est estimée à environ 40 minutes. Le montage de ce véhicule doit être effectué par un adulte. Les enfants pourraient se blesser avec des petites pièces, des bords ou des points tranchants pendant le montage du véhicule. Il est déconseillé de laisser les enfants manipuler les pièces ou aider au montage.
- Identifier toutes les pièces avant de débiter le montage et enregistrer tout le matériel de montage jusqu'à ce que le véhicule soit assemblé pour s'assurer qu'aucune pièce n'est manquante.
- Outils nécessaires au montage : tournevis et clé.
- Toutes les vis nécessaires sont emballées dans une petite pochette d'accessoires. Puis visser les vis sur les pièces pour compléter le montage.

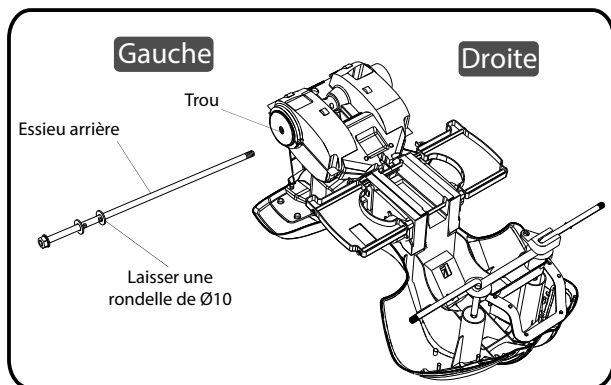


1 Montage de l'essieu arrière

- Retourner le véhicule, de sorte que le toit soit face au sol.
- Dévisser l'écrou de l'essieu et une rondelle de Ø10 (laisser au moins une rondelle de Ø10).
- Glisser l'essieu arrière à travers le trou prévu à cet effet à l'arrière du véhicule, par le côté gauche.

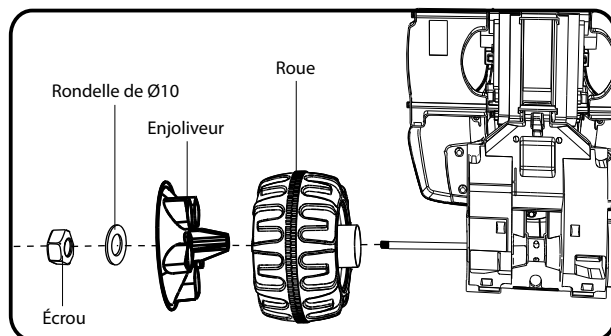


2 Montage de la roue motrice

- Glisser dans l'ordre : la roue motrice, l'enjoliveur, une rondelle de Ø10 sur l'essieu arrière et serrer l'écrou avec une clef.
- Suivre les mêmes étapes pour les deux autres roues.

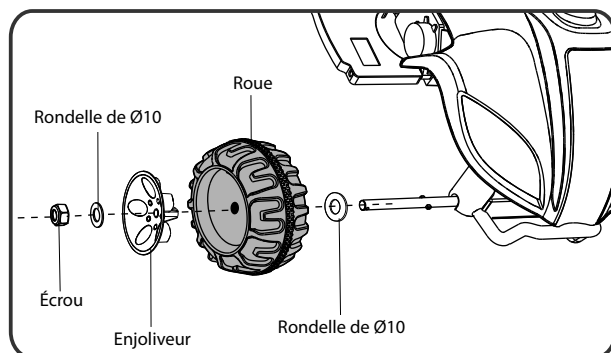

3 Montage de l'essieu arrière

- Dévisser l'écrou de l'essieu et enlever la rondelle.
- Glisser dans l'ordre : la rondelle de Ø10, la roue, l'enjoliveur, une rondelle de Ø10 sur l'essieu arrière et serrer l'écrou avec une clef.
- Suivre les mêmes étapes pour les deux autres roues.

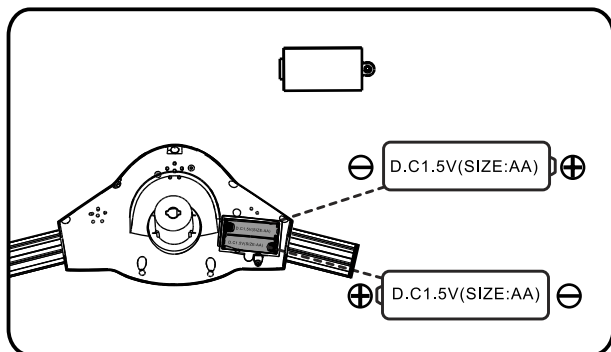


4 Insertion des piles pour la fonction musique.

Desserrer la vis du volant pour retirer le couvercle des piles. Insérer deux piles alcaline «AA» (Lr6) puis mettre le couvercle et le sécuriser avec une vis. Les piles ne sont pas fournies avec le produit.

Battery Safety Information


Batteries may leak fluids that can cause chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Use only batteries of the same or equivalent type as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.

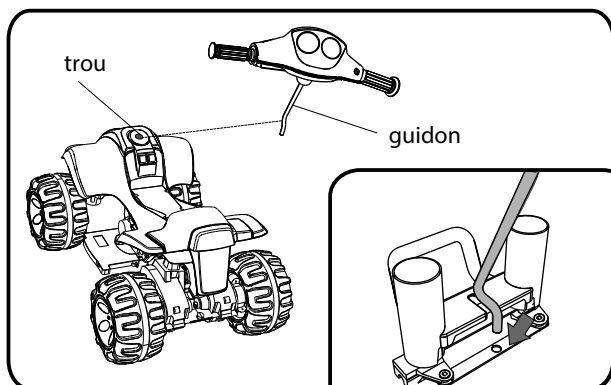


5 Montage du guidon

Tourner le véhicule verticalement. Ajuster la colonne de direction du guidon à travers la grande ouverture à l'avant du véhicule. Soulever légèrement l'extrémité avant du véhicule. S'assurer que la colonne de direction s'insère correctement dans le trou de la liaison de direction. Appuyer sur l'assemblage du guidon pour l'enfiler.

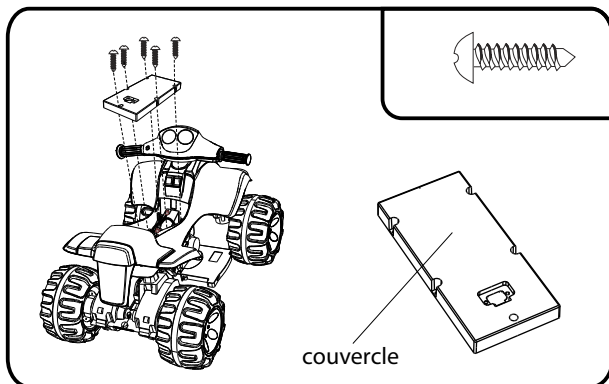

7 Connecter les fils de la batterie


Retirer les cinq vis du couvercle de la batterie, retirer le couvercle.

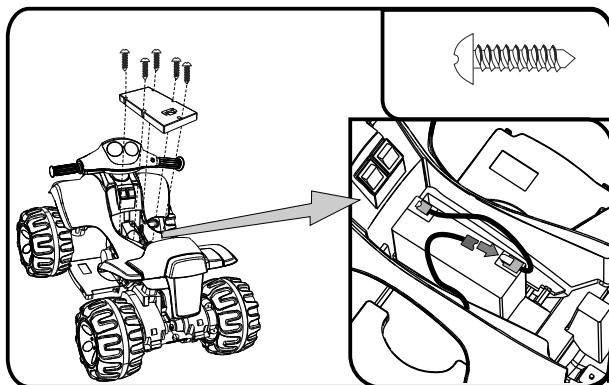

7 Connecter les fils de la batterie

Brancher le connecteur dans la borne rouge de la batterie (rouge à rouge, noir à noir).

Placer le couvercle de la batterie en position homologuée sur la carrosserie puis insérer cinq vis avec un tournevis.

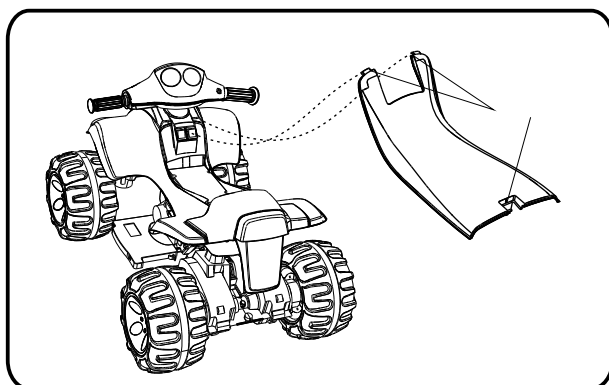

8 Montage du siège

Installer les languettes à l'avant du siège dans les fentes prévues à cet effet.

Les enfoncer fermement vers le bas près de l'arrière du siège pour le fixer au véhicule.

(Il faut retirer le siège pour remplacer le fusible. Pour retirer le siège, appuyer sur les languettes au niveau du siège et le soulever.)

7. How To Operate The Vehicle


Make sure below works have been done before using:


- The vehicle was assembled well according to the instruction manual.
- Teach appropriate safety rules to your child before allowing operation of this vehicle. These rules should also be reviewed with neighborhood children or other playmates who want to drive this vehicle.

To reduce the risk of injury:

- Always wear a helmet when riding.
- Direct Adult Supervision Required.
- Always sit on the seat.
- Always Wears shoes.
- Never allow more than one rider.
- Keep Children within Safe Riding Areas:
Never use in roadway, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water;
- Use the toy only on flat surfaces. such as inside your house, garden or playground.
- Never use in the dark. A child could encounter unexpected obstacles and have an accident. Operate the vehicle only in the daytime or a well-lit area.
- This vehicle has adjustable play seat belts. please instruct children how to tie the safety belt before using, guarantee the security.

Use operation (refer to the sketch map of function)

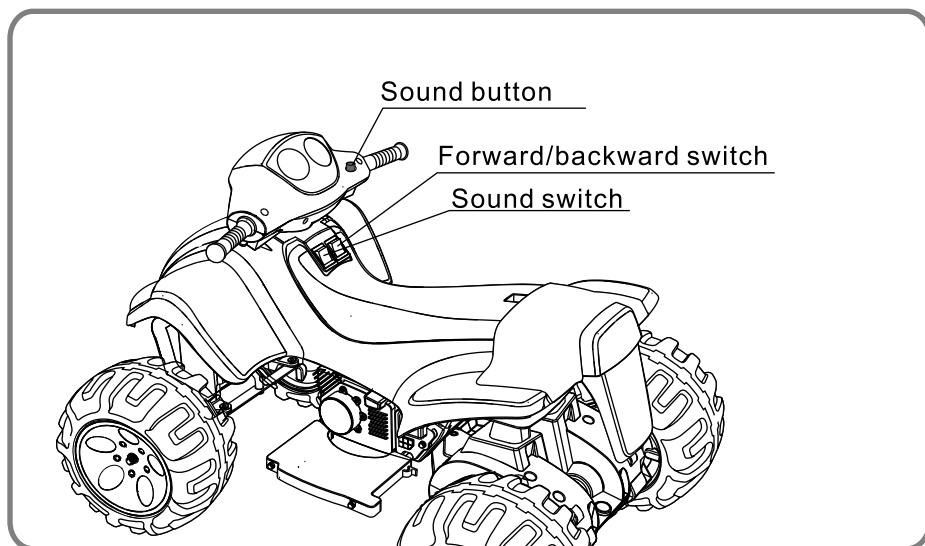


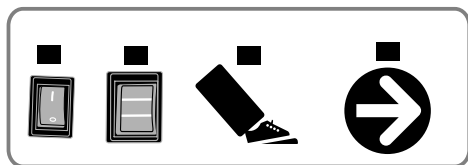


- 1.
- 2.
- 3.
- 4.



- 1.

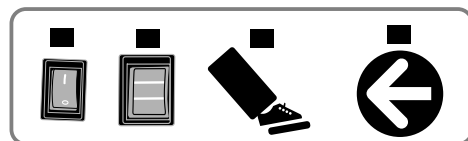

- 1.
- 2.
- 3.
- 4.

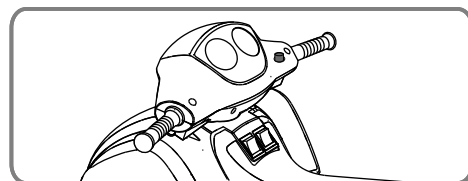


- 1.

NOTICE:

-
-


8.

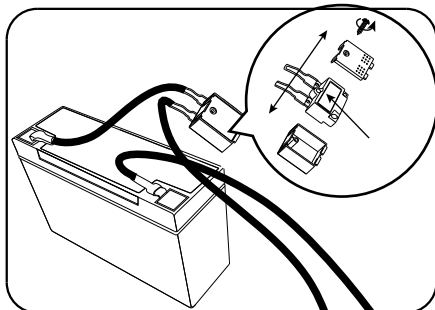

-
-
-
-
-
-
-
-

9.

-
-
-
-
-
-

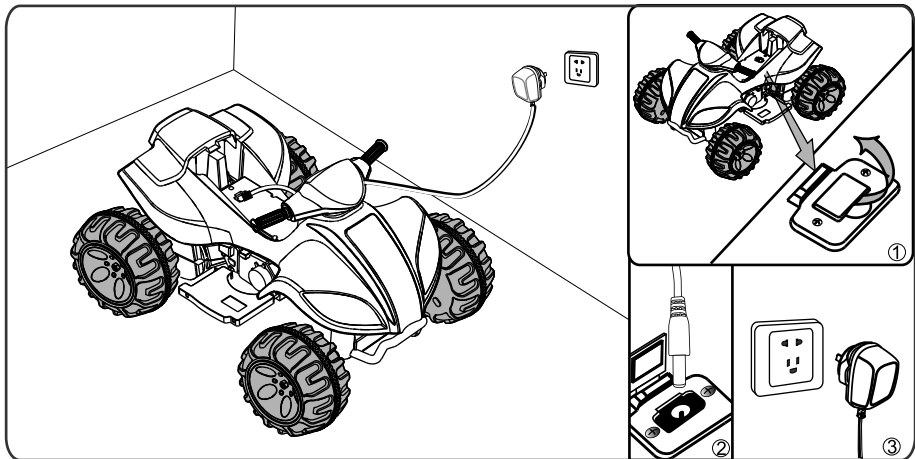

- 1
- 2
- 3

-

10. Trouble Shooting Guide

Problem	Possible Cause
(1).The 6-Volt battery Will not recharge	1.Motor connector or adapter connector is loose. Make sure the motor connector and the adapter connector is firmly plugged. 2.The 6-volt battery will not recharge. Make sure the charger is plugged into a wall outlet and the power flow to the outlet is on. 3.Charger is not plugged in. Make sure the charger is plugged into a wall outlet and the power flow to the outlet is on. 4.Check and replace the fuse if necessary.
(2).The vehicle does not run	1.The battery may be low on power. After each use, or once a month minimum, charge the battery for a "full" 10 hours. DO NOT leave the battery on the charger for more than 20 hours. 2.Thermal fuse has tripped Restart it by pressing down the button of the circuit protection.

(2).The vehicle does not run	3.Wheel nuts are loose. If the wheel nuts with a wrench. 4.Motor connector or wires are loose. Make sure the motor connector is firmly plugged into the battery. 5.Battery is dead. Have you properly maintained the battery according to the directions? Is the battery old? Your battery may need to be replaced. 6.Electrical system is damaged. Water may have corroded the system, or loose dirt, gravel or sand might have jammed the switch. Check. 7.Motor is damaged. The vehicle needs professional repair.
(3).The vehicle does not run very long.	1.Battery may be undercharged. You may not be charging the battery long enough. After each use, or once a month minimum, charge the battery for a “full” 10 hours. DO NOT leave the battery on the charger for more than 20 hours. 2.Battery is old. The 6-volt battery will eventually lose the ability to hold a charge. Depending on the amount of use, and varying conditions, the battery Should operate for one to three years. Replace the battery with a new 6-volt battery.
(4).Battery buzzes or gurgles when charging.	1.This is normal and not a cause for concern. It may also be silent when charging, which is also normal.
(5).The vehicle runs sluggishly or beeping occurs.	1.Battery needs recharging. After each use, or once a month minimum, charge the battery for a “full” 10 hours. DO NOT leave the battery on the charger for more than 20 hours. Low battery signal will sound when the battery is running low on power. 2.Battery is old. The 6-volt battery will eventually lose the ability to hold a charge. Depending on the amount of use, and varying conditions, the battery Should operate for one to three years. Replace the battery with a new 6-volt battery. 3.Vehicle is overloaded. Maximum weight is 30 kg. DO NOT overload the vehicle. DO NOT tow anything behind the vehicle. ONLY one rider at a time.

-

-

-

-

-

-

-

-

-

-

-

-

12. Disposal Of Battery

Disposal of Battery



- Your sealed lead-acid battery must be recycled or disposed of in an environmentally sound manner.
- Do not dispose of your lead-acid battery in a fire. The battery may explode or leak.
- Do not dispose of a lead-acid battery in your regular, household trash. The incineration, land filling or mixing of sealed lead-acid batteries with household trash is prohibited by law.
- Return an exhausted battery to your local approved lead-acid battery recycle, such as a local seller of automotive batteries.
- Contact your local waste management officials for other information regarding the environmentally sound recycling and disposal of lead-acid batteries.