

KINGTOYS

MANUEL EN COURS DE TRADUCTION




RIDER CONCEPT

Importateur de loisirs innovants

LAMBO 50W

Voiture électrique KINGTOYS

 Avec télécommande

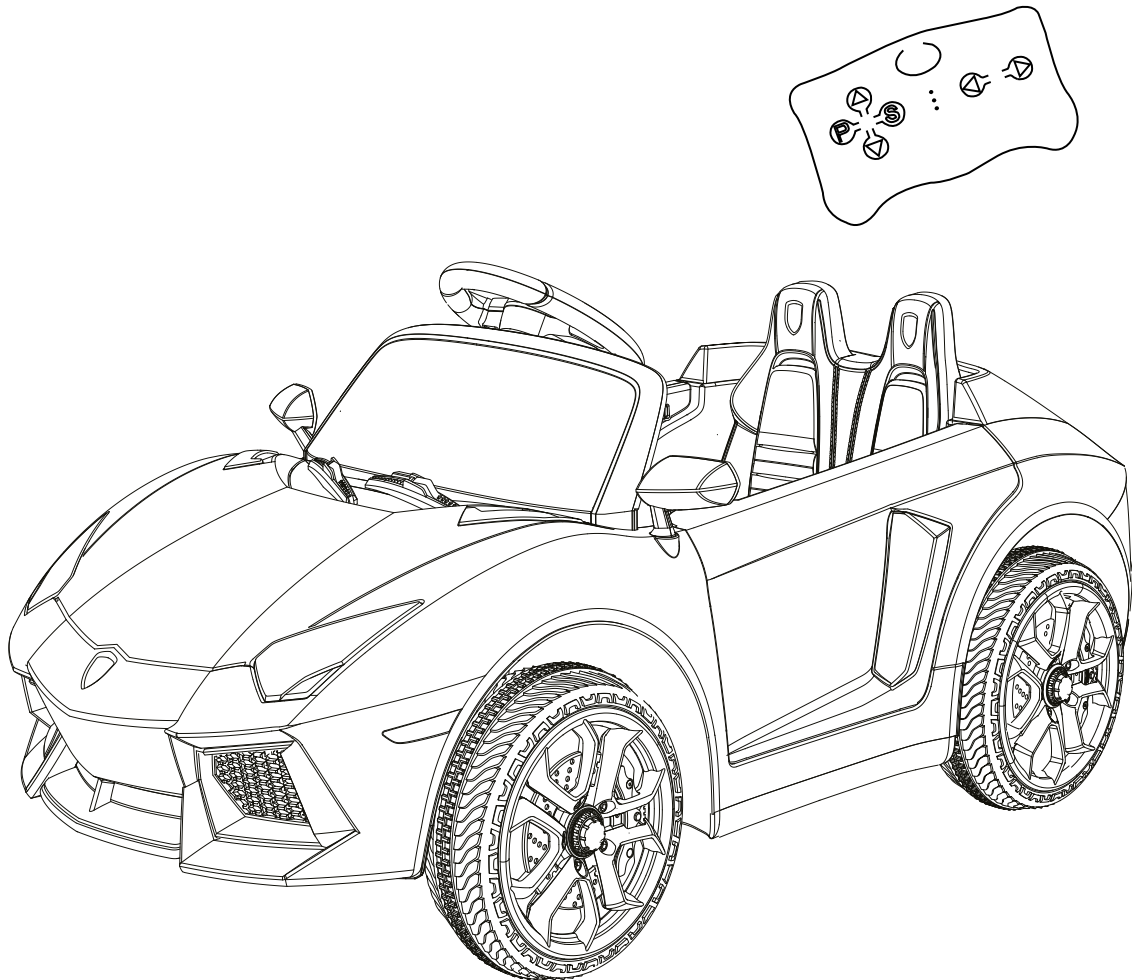

- Adapté aux enfants de 3 à 8 ans
- Capacité maximum : 30kg
- Le montage doit être effectué par un adulte

Conserver ce manuel.

Avant la première utilisation, charger la batterie durant 4-6 heures.

Use the product please first read instructions,it will tell you the correct methods of operation and installation instructions.To avoid not correct methods of operation of this product damage or injury and your baby.

Manual should be placed to take good care of.

It's STANDARD NO.:EN71 EN62115

The product to get c is the main ingredients of the important parts.

SPECIFICATION

Battery	2*6V4. 5AH
Motor	12V30W、 12V15W
Charger	Input:AC220V-240V、 50HZ-60HZ,Output:DC12V1A
Maxmium load	30 KG
Work Time	Recharge 8-12h,Use for 1-2h
Speed	3- 5 KM/H
Age	37 months - 96months
R/C Battery	AAA 1.5V * 2
R/C Distance	15 ± 5M

SAFE RULES



Warrnning

Non-transportation, must be care of adult!

Before using the child for education, safety!

- 1.Be charged by an adult, don't let the children touch.
- 2.Driving, we must by adults, and the tutelage use.
- 3.Clamp down on the streets, roads, slope, waiting for over a backward, to eliminate obstacles to ride.
- 4.It's suitable for children for about 37-96 months.
- 5.Cycle shall not leave the seat to prevent operation resulting in injury.
- 6.In the car was pulled, the device, such as a block, please immediately release switch to eliminate the obstacles and foot before you ride.


CHARGE METHOD

- 1.First to use please open the cushion , and the battery connections with main distributing frame, with red in red and black in black, not a line ends meet, or cause a short-circuit.
- 2.Charging socket the cushion down side, and needs recharging. charger plug in the outlet, then insert the power outlet.
- 3.The train slowly, in charge, the time for 8-10 hours, and not more than ten hours.
- 4.In the first to use the deposit, we must ensure that the cell battery up to 10 hours. otherwise, permanent damage cells and beyond repair.
- 5.Charging devices or battery which has a fever (60 C) are normal.
- 6.The electric baby must use this car is equipped with the charger and the battery, in the case of broken the cell phone chargers and the counter-voltage or an electric circuit.
- 7.Have to recharge the batteries to be recharged from the toy the use of battery.
- 8.Not mixed with the old and new or different types of batteries.
- 9.Can't insert the battery wire connector.
- 10.When the baby is not use for a long time, at least once every month to charge.
- 11.Toys can't connect to the surplus on the use of the recommended amount.
- 12.When the car is charging,can't use it.

PACKING LIST


★ Car body (polypropylene)	1PC	★ Charger	1PC
★ The steering wheel	1PC	★ MP3 connector	1PC
★ Chair	1PC	★ Manual	1PC
★ Car wheel, blocks	4PCS	★ Remote controller	1PC

 Etapes de montage

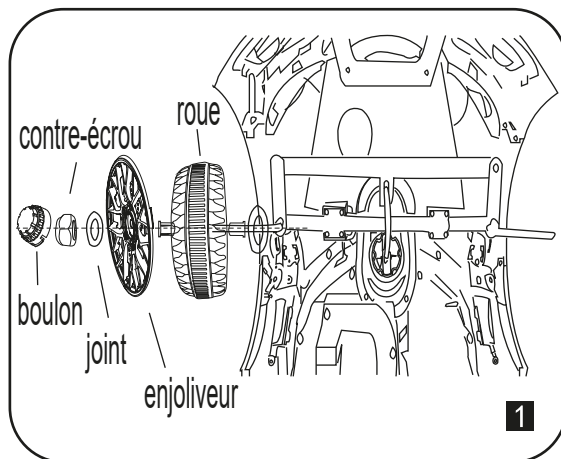


Montage des roues avant

 Faire glisser un joint sur l'essieu avant, puis une entretoise. Ensuite, insérer la roue sur l'essieu. Puis, insérer un autre joint à sécuriser avec un contre écrou. Enfin, mettre l'enjoliveur. (Suivre le modèle du schéma 1 ci-contre)

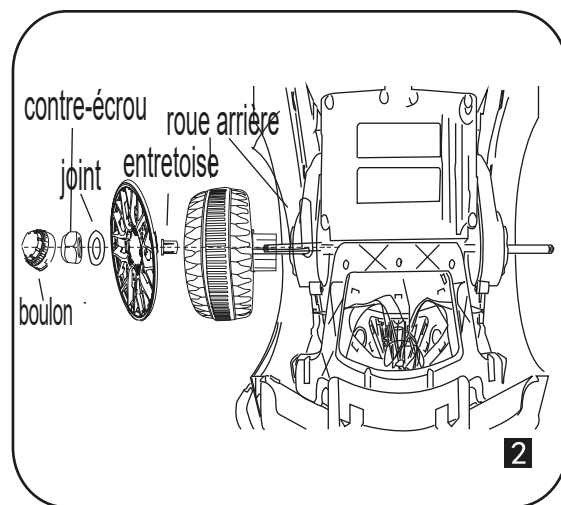

Montage des roues arrière

 
Mettre la roue arrière sur l'essieu arrière, puis ajouter un joint. Sécuriser ensuite avec un contre-écrou. Enfin, mettre l'enjoliveur. (Suivre le modèle du schéma 2 ci-contre)

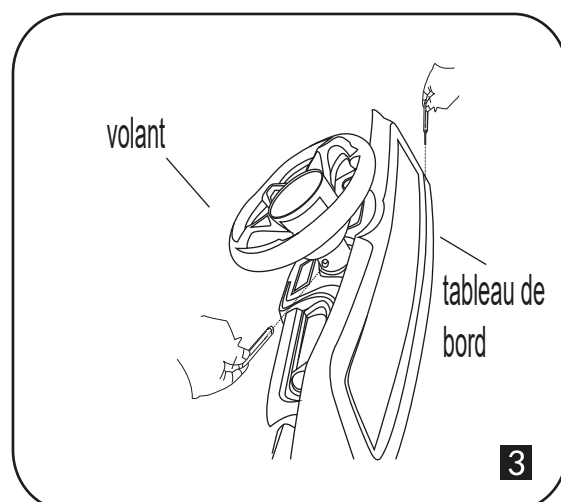

Montage du volant

Connecter les connecteurs du volant avec ceux du tableau de bord (positif et négatif). Ensuite, aligner le volant avec les trous puis mettre la vis hexagonale M5 dans le trou du volant et sécuriser avec un écrou. (Suivre le modèle du schéma 3 ci-contre)

 
Etapes de montage

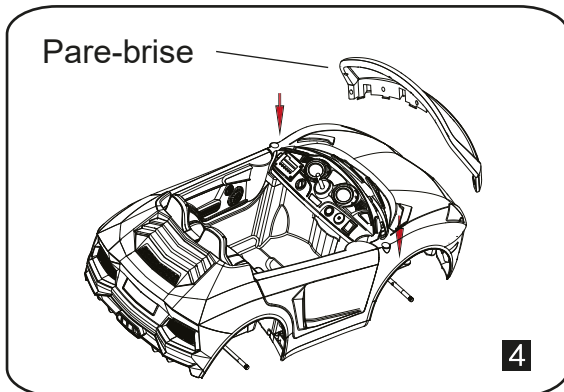

Montage du pare-brise


Insérer le pare-brise dans les fentes prévues à cet effet sur les côtés à l'avant du véhicule. Appuyer jusqu'à entendre le "click" indiquant que le pare-brise est bien en place.

 (Suivre le modèle du schéma 4 ci-contre)

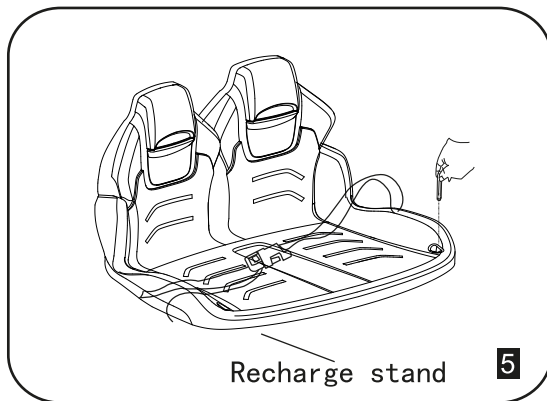

Charging instructions

 
Before installing seat first connect the positive, and then put seat in the specified location, card hook body card slot, then put the front seat fixed on both sides of the hole with the screw clockwise tightened when charging, open cover charge first, and then insert the charger to charge hole, when charging the vehicle without any function. (as shown in figure 5)

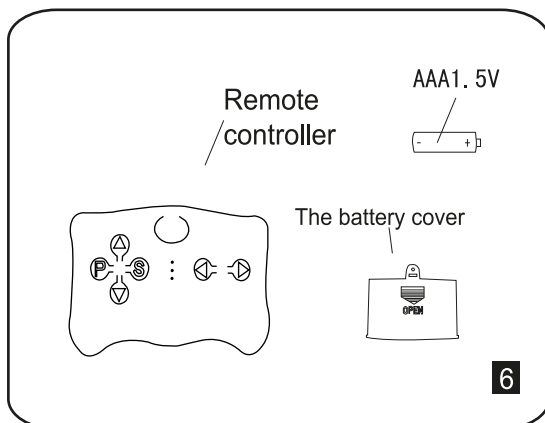

Remote control battery installation

First use the screwdriver to unscrew the screw on the battery cover, then take out the battery cover and remote control into two AA1.5 V batteries, and battery cover cover and screw locking. (see figure 6)

 Etapes de montage

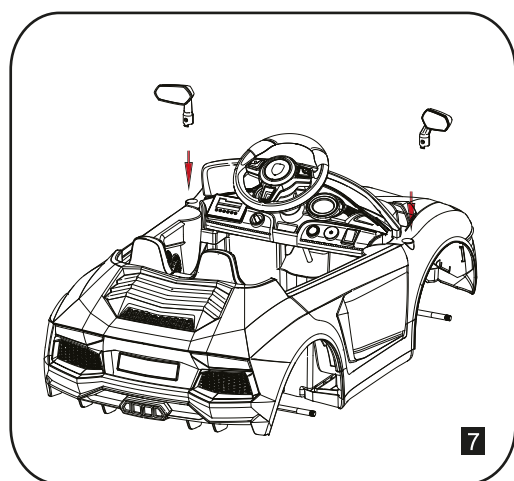


Montage des rétroviseurs

Placer le rétroviseur droit du côté passager et le rétroviseur gauche du côté conducteur.

Insérer les rétroviseurs dans les emplacements prévus à cet effet avec trois grandes têtes plates T4.0*16 dans la carrosserie du véhicule.

 (Comme présenté sur le schéma 7)

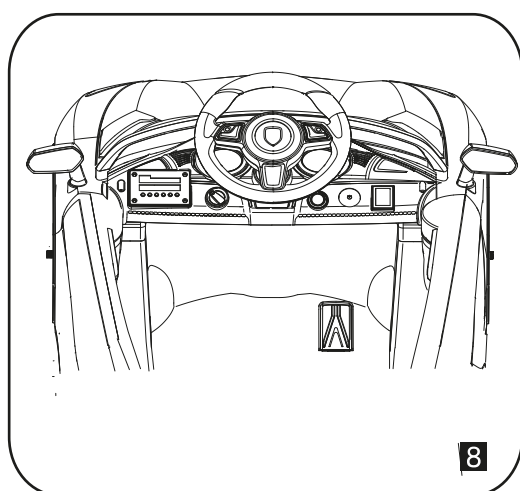

Functional instructions

1 turn on the main power switch, start the sound, and the light is on.

2 forward and backward switch set "forward" position: step on the foot switch, the car forward, forward and backward switch set back position, step on the foot switch, the car back running.

3 sound and light parts: the steering wheel buttons are speakers and music. After the start of the car sound light display vehicle voltage. With MP3, with USB interface, sound and light button function to mark as the standard button4 open the swing switch, then the vehicle swing function.5 long time no use, please turn off the power switch and disconnect the battery connection. To ensure 1 months to recharge once again.(as shown in Figure 7)

TROUBLESHOOTING

PROBLEM	ANALYZE	SOLUTION
Car doesn't work	• Low power	Recharge the battery
	• Damage of thermic fuse	Change with new thermic fuse
	• Lose of wheel nut	Use new nut
	• Loose of battery connector	Put on the connector
	• Exhaust & bad battery	Change with new battery
	• Damage on electrical parts	Go to repair shop
	• Damage on motor	Go to repair shop
Battery can't be recharged	• Loose of the battery connector	Tighten the connector
	• Charger doesn't plug the power	Plug charger with power
	• Damage of charger	Change new charger
Short of run time	• Battery with lower power	Recharge the battery fully
	• Battery is old	Change new battery
Noise & Heat during recharge	• It's chemical process	It's normal & safety
Low Speed	• Old battery	Use new battery
	• Low power	Recharge the battery fully
	• Over burden	Reduce burden under 25KG
	• Run on not-flat ground	Run on flat ground
Noise of gear box	• Damage of gear box	Go to repair shop
	• Damage on motor	Go to repair shop
Car shake when running	• Bad connect of motor wire	Reconnect the wire
	• Motor doesn't work well	Go to repair shop
No sound & light when running	• Loose of sound & light wire	Connect the wire
	• Damage of sound & light board	Go to repair shop
Car can't stop in run	• Damage of electrical parts	Go to repair shop
Unusal working condition under Remote control	• Remote control battery exhaust	Change battery
	• Remote control out of distance	Keep near distance between car and remote control
	• Damage of remote control	Damage of remote control
	• Damage of receiver board	Change receiver board
	• Disturb of magnetic filed	Far away from magnetic filed

USE CAUTIONS

1. In the first to use the deposit, we must ensure that the cell battery up to 10 hours. otherwise, permanent damage cells and beyond repair.
2. In the streets, roads, slope, ditch and the danger area.
3. Please don't on the polished surface, such as marble, tile on the surface.
4. This product by one, not limit, the greatest relief to over 30KG.
5. Don't run in an electric switch on deposit in the back of the light switch.
6. Shall not be altered the car circuit or device to additional charged
7. The remote control and not to let it get caught in the rain or otherwise made in water and keep away from sources of ignition to avoid causing the damage.
8. Met with obstruction, the baby stop, please leave the obstacles to ride.
9. Don't use in the water, water and other liquids in the car.
10. Not in use, to avoid hitting the child.
11. When the remote control battery power is low, the car on the remote control and turned back, a short distance, shake, please replace the battery!
12. Not in use, please turn off the switch. no, please unplug the battery, a connector.
13. The types of batteries that may be used.
14. How to remove and insert the batteries.
15. Non-rechargeable batteries are not to be recharged.
16. rechargeable batteries are only to be charged under adult supervision (for toys supplied with a battery charger for use by children, this instruction may be replaced by. " Batteries are only to be charged by adults or by children at least 8 years old")
17. Rechargeable batteries are to be removed from the toy before being charged.
18. Different types of batteries or new and used batteries are not to be mixed.
19. Batteries are to be inserted with the correct polarity.

20. Exhausted batteries are to be removed from the toy.
21. The supply terminals are not to be short-circuited.
22. Toys shall be provided with instructions for assembly if.
23. They are intended to be assembled by a child.
24. These instructions are necessary for safe operation of the toy.
25. Instructions shall be provided that give details concerning cleaning and maintenance when necessary for the safe operation of the toy.
26. They shall state that transformers or battery chargers used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until the damage has been repaired.

DECLARATION:

- 1) Manual used in illustrations to explain the product of the operations and products, with the installation of structure in the existence of a small difference in kind, please standard the object.
- 2) In order to improve product quality, not to notice, we may change the part of the structure, and appearance. please forgive.
- 3) This package contains important information that must be to keep.
- 4) Cannot be used in rainy days.
- 5) Can not use water to clean.
- 6) Assembly by an adult.”
- 7) Protective equipment should be worn. Not to be used in traffic.”

Safe use of rules

Must by adults on the local assembly, please check whether the device and circuit assembly assembly process correctly.

Default of banned in the streets, highways, landslides and other dangerous places.

Children must be under the custody of adult use.

When used on the local, please do not casually change device.

When use, shall not be frequently switch forward backward function.

Please check the battery, line, plugs, and other parts for damage and found damaged, please stop using in time,

Until the restored can be reused.

The rechargeable battery can't charge.

Should be in the right electrode in the battery.

Run out of battery should be removed from the toy.

The power terminals shall not be short

Charging matters needing attention

1, using electric vehicles for the first time to charge first! Charging in car tail, charging charging

Cover first then put the plug in the charging socket, then the charger plugged in. (charging must

Be made into do, do not let your children's access to power supply)

2, please recharge immediately when electric vehicle driving speed slowed significantly, continuous

Charging 8 to 10 hours, not more than 10 small at the right time.

3, in the process of charging the charger or battery have fever phenomenon (under 60 °) are

Normal.

4, the electric car must use local car equipped with dedicated charger and battery, so as not to

Damage the charger and battery and electric circuit.

5, the electric vehicle charging shall not do any operation.

6, please a mixture of old and new or different types of batteries.

7, electric vehicle charging, please check whether the circuit connection is correct.

8, when the electric conductor time when not in use, must charge at least once every month.

Warning: electric car used in non private places, may lead to drowning, burns, falls and other hazards.



Using The Matters Needing Attention

Products should be assembled by adult right before use.

Battery charging should be carried out by adults, must first be charged before using this product.

The first use of electric vehicles, must ensure that the battery full 10 hours! Otherwise it would be permanent damage

Pool and beyond repair.

Please don't in the street, the road, landslides and other dangerous places, and be sure to use under adult supervision.

This product is limited to a person, do not overload, the largest capacity of 30 kg.

Please fasten your seat belt, and make sure that your baby is always sat on the bench, at the same time, please do not let the baby in

Runtime stand or do some dangerous action.

Please don't suddenly change in the process of electric vehicles run forward/backward switch.

To prevent collisions with valuables, please do not use in a relatively narrow space, in order to avoid damage to electric vehicles.

Please check the product and the charger, check the wires, plugs, shell packaging and other components

Damaged, found that the damage should stop using, to be repaired before use.

When not in use for a long time, please turn the power off and remove the battery connector.

Children must use under adult supervision.

Safe use period: three years.

Please do not use in the streets, roads, landslides and other dangerous places, and must be used under adult guardianship.

The toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.